

Raspberry Pi: Setting Up System

dumped for now...

[pi3_tablet.txt](#)

```
pi3_tablet:
- pi3 with 7in display
(https://www.raspberrypi.com/products/raspberry-pi-touch-display/) &
enclosure
INSTALL:202408181341
- using raspios-bookworm-arm64 image (with desktop)
- first boot
= setup user => common!
= skip update - do that later
- reboot
= display is inverted (Menu>Preferences>Screen Configuration)
  > right click DSI-1
= update system (if applicable)
= customize system (Menu>Preferences>Raspberry Pi Configuration)
  > set hostname
  > enable ssh & i2c
- reboot
= install: vim geany screen
= remove: nano
= touch is independent of display setting (inverted)
  > edit /boot/firmware/config.txt (insert:dtoverlay=vc4-kms-
dsi-7inch,invx,invy)
  > also need this (dtparam=i2c_vc_baudrate=50000)
- get my usual stuff from codeberg
= mylshell, myllinuxpi, mylcodeplib, mylcodebase
= mylimgpro, mylimgproX
```

From:
<http://azman.unimap.edu.my/dokuwiki/> - **Azman @UniMAP**

Permanent link:
http://azman.unimap.edu.my/dokuwiki/doku.php?id=raspi:raspi_system_setup&rev=1724122699

Last update: **2024/08/20 10:58**

